


Laser ML 2 H

Placing

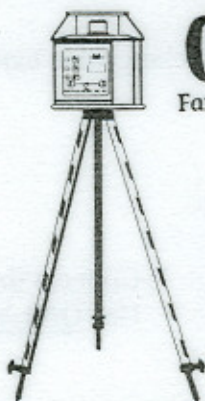

HITECHNIQUES LTD.
01-4580725

Fax: 01-4588296 Rathcoole, Co. Dublin
 E-Mail: survey@iol.ie



Operation

A : Turn on / Turn off.

B : Manual / Automatic.

C : Status indicator:

Flashes slowly: Laser levels.


Flashes fast:

Tilt function is activated, turn the laser off, then on again. Make sure that the placing still is correct.

D : Battery indicator: The battery must be recharged when flashes.

E : Adjustment of slope in Vertical/Manual mode.

F : Adjustment of slope in Vertical/Manual mode.

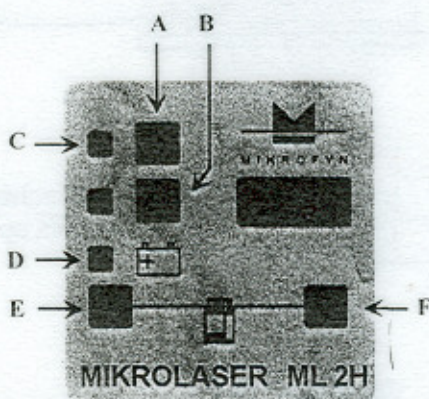

HITECHNIQUES LTD.

01-4580725


Fax: 01-4588296 Rathcoole, Co. Dublin
E-Mail: survey@iol.ie

Battery


The ML 2H has an internal rechargeable battery, the working time lasts up to 30 hours.

Charging of battery.


- 1: Connect the laser to the charge unit
Use **ONLY** the supplied charge unit.

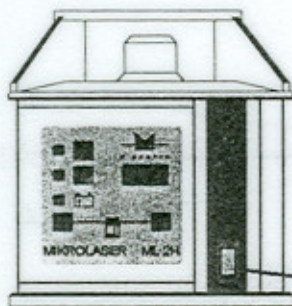


220 Volt

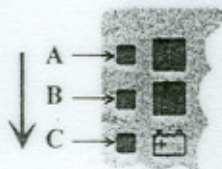

2. Laser is in "discharge state", the lamps flash from A to C
This state takes up till 1.5 hours (fully recharged)

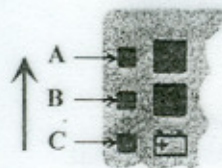

3. After the discharge the laser moves into a "charge state",
the lamps flash from C to A.
The charging takes about 8 hours.

The "discharge state" can be skipped by pressing  during the discharge sequence.

TIP: By discharging the battery before charging it,
its service life will be prolonged considerably.